

# RackView QUICK START



## Step-by-Step Instructions

### Rack Mounted KVM Drawer with KVM Switch Option

**RV1-KVM15**  
1U, 15" LCD

**RV2-KVM13**  
2U, 13.3" LCD

**RV2-KVM15**  
2U, 15" LCD

## Package Contents

- Monitor Keyboard Assembly (1)
- Rear Finger Brackets (2)
- Black Self Tapping Screws (10)
- Pieces of Velcro (2)
- Manual (1)
- PS2/Serial Adapter (1)
- TFT/LCD Monitor Instruction Disk (1)\*  
\* Use only if necessary; should run on windows driver

## Tools Needed

- #2 Phillips Head Screwdriver

## Things to Note


- This installation Quick-Start is for the RackView drawer itself. When RackView comes with the Rose KVM switch option, please refer to the switch manual for cable connectivity and configuration.
- **Do not adjust the front rail bracket.**
- Cage nuts are not provided with this system, however, they are available at no charge if needed.
- The distance between the front and rear rails of the rack must be 23-28".
- When you have finished, there may be extra hardware left over. This is due to the fact that the hardware provided works on various models.

## Questions?

- If you have any questions or difficulties while installing the RackView unit, call (281) 933-7673 immediately and ask to speak to a Rose Technician.
- One year warranty




WWW.ROSEL.COM

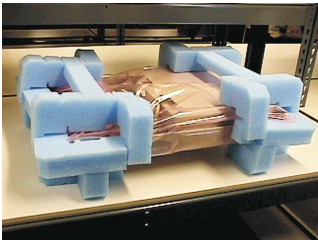

### Step 1

Remove the tray from the box by gripping from the middle of the unit.

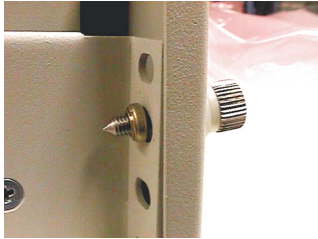

### Step 2

Remove external shipping nuts from back of captive screws (on both sides) and discard.



### Step 3


Set unit on flat surface. Open monitor far enough to remove foam material.



### Step 4

Attach finger brackets to rear rails using 10/32 self tap screws.


Bottom holes of bracket and rack should line up.

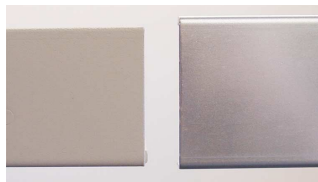


### Step 5

**Requires two people to complete this step.**

No screws are necessary to attach unit to rear.

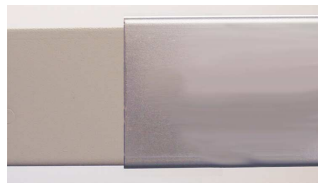

Guide the monitor and keyboard assembly onto rear brackets.

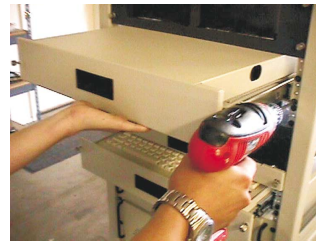

### Step 6

Screw the front brackets into the rack.



### Finished Product

Monitor, keyboard and trackball are ready to use.

#### ROSE ELECTRONICS - US HEADQUARTERS

10707 Stancliff Road ■ Houston, Texas 77099 ■ USA  
Tel 281-933-7673 ■ Tel 800-333-9343 ■ Fax 281-933-0044 ■ sales@rosel.com

#### ROSE ELECTRONICS - CANADA

4981 Hwy 7 E, Unit 12A, Ste 255 ■ Markham, Ontario L3R 1N1 ■ CANADA  
Tel 905-475-4242 ■ Fax 905-415-1444 ■ canadiansales@rosel.com

#### ROSE ELECTRONICS - EUROPE

Bourne Works High Street ■ Collingbourne Ducis  
Marlborough Wiltshire SN8 3EH ■ UNITED KINGDOM  
Tel +44 (0) 126 485 0574 ■ Fax +44 (0) 126 485 0529 ■ europesales@rosel.com

#### ROSE ELECTRONICS - BENELUX

Albert Plesmanweg 121-141 ■ Rotterdam 3088 GC ■ ZUID HOLLAND  
Tel +31 (0) 6-53481450 ■ Fax +31 (0) 10-2833235 ■ beneluxsales@rosel.com

#### ROSE ELECTRONICS - GERMANY

Lise-Meitner-Strasse 1-7 ■ 24223 Ralsdorf ■ GERMANY  
Tel +49-430-7900-170 ■ Fax +49-430-7900-171 ■ germansales@rosel.com

#### ROSE ELECTRONICS - ASIA PACIFIC

PO Box 3184 ■ Robina T.C. ■ Queensland 4230 ■ AUSTRALIA  
Tel +617 5575 9028 ■ Fax +617 5575 9352 ■ asiapacificsales@rosel.com



WWW.ROSEL.COM