

QUICK START GUIDE


ICU504A

USB 3.1 EXTENDER

24/7 TECHNICAL SUPPORT AT 877.877.2269 OR VISIT BLACKBOX.COM



STEP 1 - Connect Local to Remote via CAT6a/7 cable

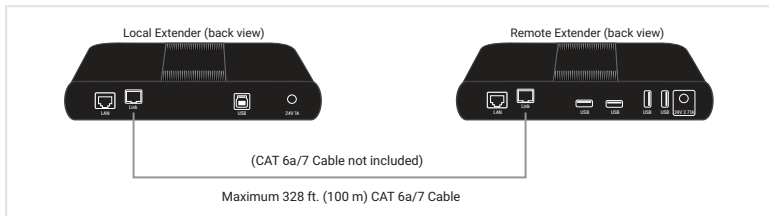


CONNECT LOCAL TO REMOTE

Place the units where desired, and connect the CAT6a/7 cable to the Link ports on the Local and Remote Extenders.




STEP 2 - Connect the Local Extender to your computer

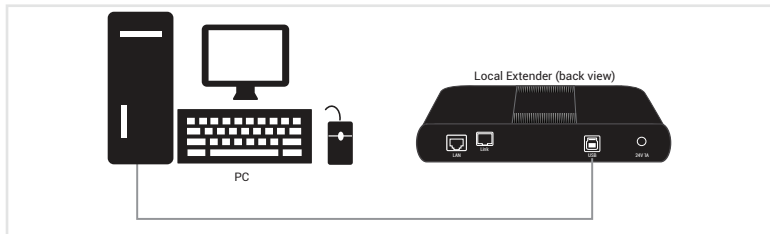

Connect the Local Extender to the computer's USB 3 port using the included USB cable.




STEP 3 - Power the Local Extender

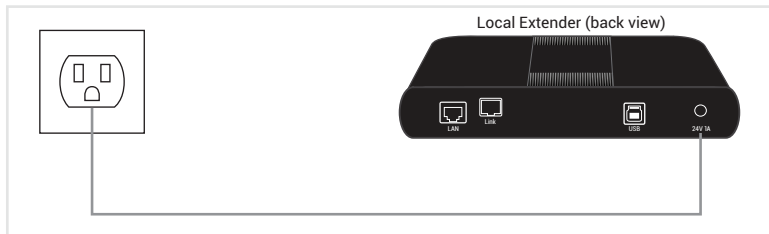

Power the Local Extender with the included 24-V, 1-A AC adapter and tighten the locking ring.




STEP 4 - Power the Remote Extender

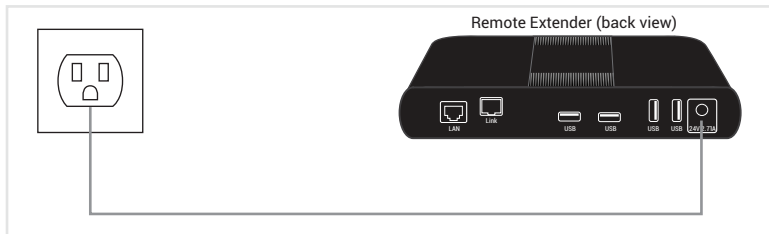


Power the Remote Extender with the included 24-V, 2.71-A AC adapter and tighten the locking ring.



STEP 5 - Attach the USB device(s) to the Remote Extender

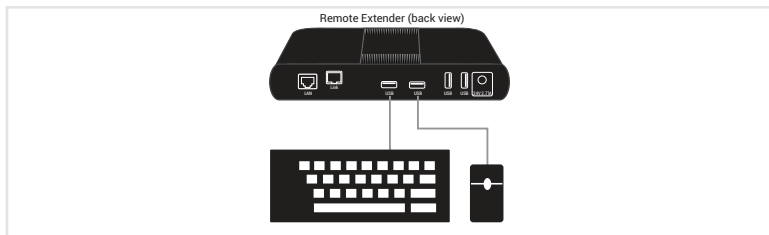

STEP 6 - Optional: Connect to a LAN network or device

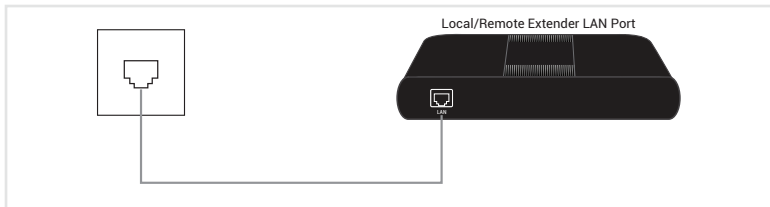

Optional: Connect Local and Remote Extender LAN ports to a network or device as necessary.

OPTIONAL: DOWNLOAD USER MANUAL

For product specifications and regulatory information, refer to the User Manual. You can download this document from our web site.

1. Go to www.blackbox.com
2. Enter the part number (ICU504A) in the search box.
3. Click on the product in the "Product Results" page.
4. Click on the "Support" tab on the product page, and select the document you wish to download.

If you have any trouble accessing the Black Box site to download the manual, you can contact our Technical Support at 877-877-2269 or info@blackbox.com



**NEED HELP?
LEAVE THE TECH TO US**

**LIVE 24/7
TECHNICAL
SUPPORT**

1.877.877.2269