


To reset Cat5 KVM Board (standalone KVM)



(1) Before your work, please make sure that **the power is disconnected.**

Step 1: Remove the casing cover screws.

(2 on the top, 3 on the bottom, 2 on each side)

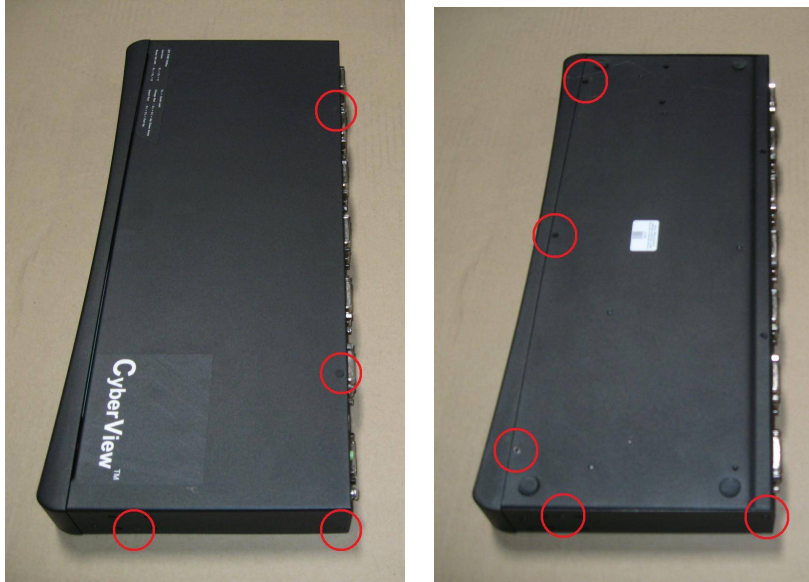

Step 2: Find the jumper **J2**, then use either paper clip or scissors to touch the two boxes of J2, then plug in the power while holding the jumper in order to **close/short the jumper 5 ~ 10 second,** then you will hear beep sound when it reset.

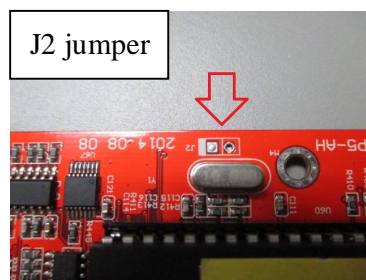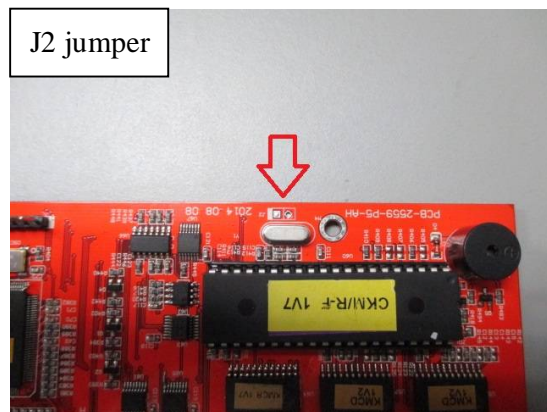

Step 3: Please reverse the procedures to assemble back the unit.