

# AVOCENT® ACS8000 ADVANCED CONSOLE SYSTEM

## Rack Mounting Guide

### 1U RACK MOUNT


#### 1. Attaching the brackets to the appliance

Remove the two screws (as shown in the figure) from each side of the Avocent® ACS8000 Advanced Console System. Secure the mounting brackets to the appliance using the supplied screws.



#### 2. Installing the appliance in the rack

Attach each mounting bracket to the desired U location using two appropriate-sized screws.

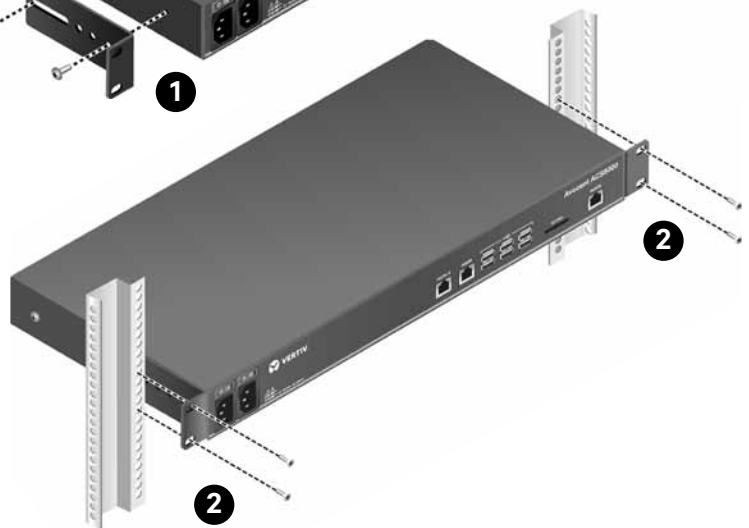

## OU RACK MOUNT

**CAUTION:** When mounting the equipment in the rack, make sure the mechanical loading is even to prevent a hazardous condition.

### 1. Attaching the brackets to the appliance

Remove the three screws from each side of the Avocent® ACS8000 Advanced Console System. Attach a left and right mounting bracket to each side of the appliance using the supplied screws. Leave the screws slightly loose to allow for bracket adjustment in the OU space.

**NOTE:** Brackets can be attached in any of the three slots to adjust for the depth of your rack.

### 2. Installing the appliance in the rack

Align the mounting brackets to the desired OU location and secure each bracket to the appropriate rail using the supplied truss head screws and serrated flange locknuts. Secure the appliance by tightening the screws holding it to the brackets.

**NOTE:** Locknuts may not be required, depending on your installation environment.

